MINOX

DIGITAL CLASSIC CAMERA 5.1

Instruction manual

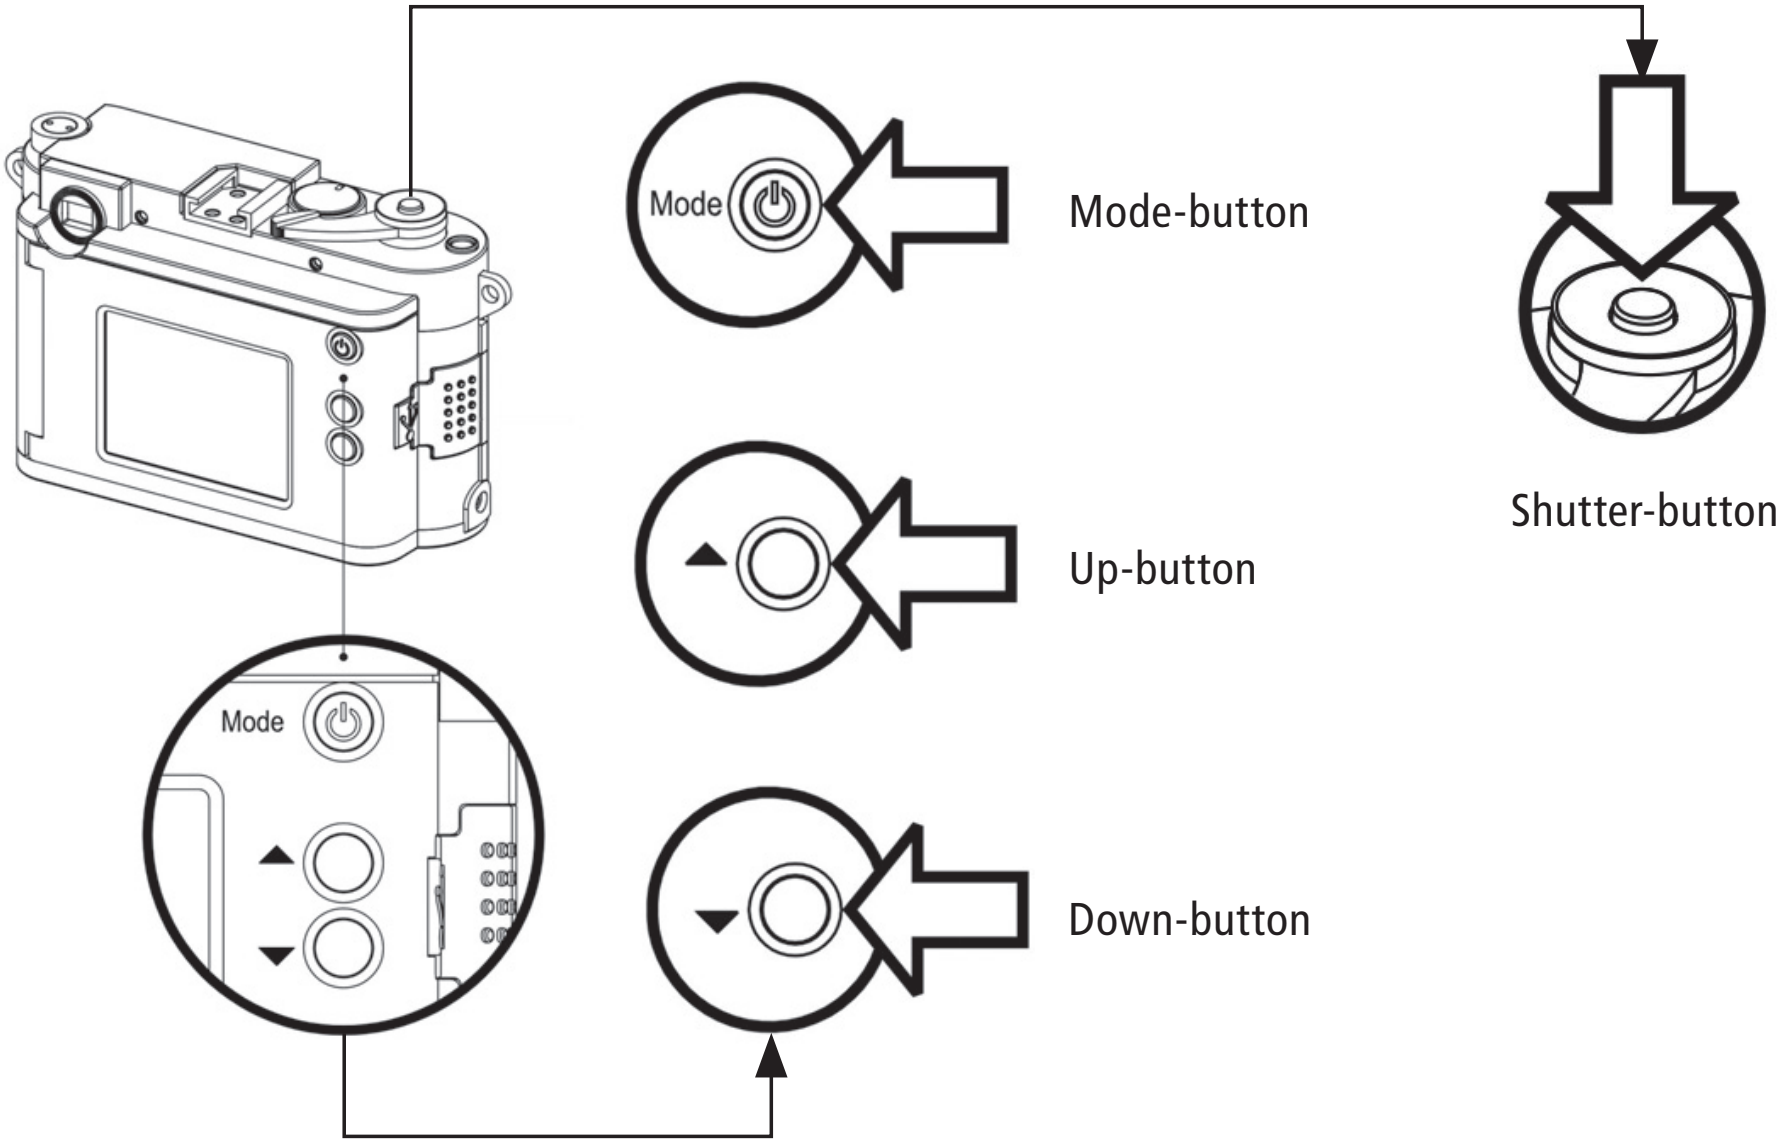
Mode
Mode
Mode-button
Up-button
Down-button
Shutter-button

Charging the battery

Connect the camera to your computer's USB port through the USB cable provided while the camera is turn off. This starts the charging automatically.

When the battery is being charged, there is a green LED indicator light up in the USB connector area.

When this indicator is turn off, the charging is completed.

Switching the camera on

To switch your camera on, press and hold the mode button. To switch your camera off, press the mode button until the Setup Screen shows up. Press the down button to highlighte *Power Off* and then press the shutter button to switch your camera off.

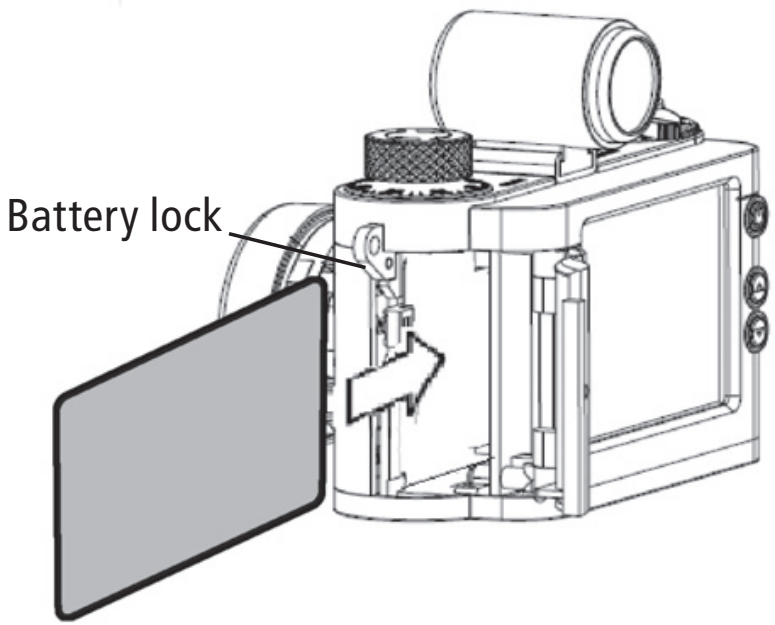

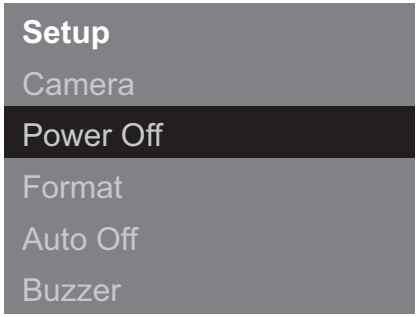

Your camera will automatically turn itself off in 60 seconds if unused to conserve battery power.

Taking your first picture

Frame your subject

When the camera is turn on, the camera is in Take Photo mode, 📷 will show on the display screen, if it is not visible, press mode button until it is.

Frame the subject you want to capture in the display screen on the back of your camera or through the viewfinder.

Take the picture

Press the shutter button to take the picture. Hold the camera steady until you hear a *beep*. This tells you that a photo has been taken.

Playback mode

Review your photos or movies on the display screen

Press the mode button repeatedly until you reach the playback mode (▶).

Use the up or down buttons to scroll through the stored images.

To review a movie clip, press the shutter button to start viewing, to stop viewing before the end of the clip press the shutter button again.

Image quality

Low (*) – 2608 x 1956 px up to 144 images

Normal (**) – 2608 x 1956 px up to 110 images

High (***) – 2608 x 1956 px up to 73 images

Press the mode button until you enter the Set-up menu. Select *Camera* and press the shutter button. You will enter the camera menu.

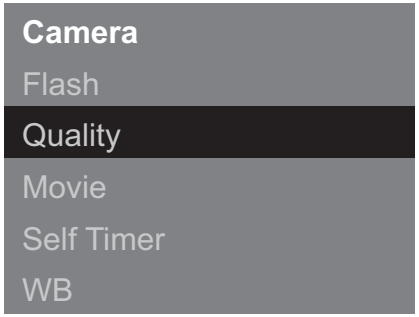

Select *Quality* and press the shutter button.

You will enter the quality menu where you can select the different quality settings using the up and down buttons.

Press the shutter button again to confirm your selection.

Increase the camera memory with an SD card

SD (Secure Digital) cards will increase the amount of memory that your camera will have available. Enabling you to store more images and videos between downloads.

The DCC supports SD Cards up to 16 GB (SDHC).

Inserting an SD card

Open the battery compartment and insert the SD card in the SD card slot with the gold contacts facing the lens.

Important: When the SD card is locked (protected), card lock icon will appear on the display screen and photo and videos cannot be taken.

Deleting unwanted images

Delete your image one at a time

In Playback mode (▶), use the up or down buttons to select the image you want to delete.

Press shutter button to view the Playback menu, scroll to *Delete One* and press the shutter button. Select *Yes* and press the shutter button again. The selection is deleted from the camera memory.

Delete all your images at once

In Playback mode (▶), press shutter button to view the playback menu, scroll to *Delete All* and press the shutter button. Select *Yes* and press the shutter button again. All saved images will be deleted from the memory.

Downloading your images to your computer

Note: You do not need to install camera drivers for Windows versions 2000/ME/XP and Mac OS 9.x or OS X. Your camera does not support version older than those stated above.

Note: When your camera is connected, your computer provides power through the USB cable, saving your camera's battery power.

Connecting your camera to the computer

To connect your camera to your computer, the camera must always be turned on first. Then connect the camera to your computer using the provided USB cable (the smaller head connect to the camera side and the larger head side connect to the computer side).

Distance Setting

The depth of field of the camera extends from 2 m to infinity, i.e. focusing is not required within this range. For close-focus shots you can infinitely adjust distances between 0.5 m and 2 m using the depth of field ring.

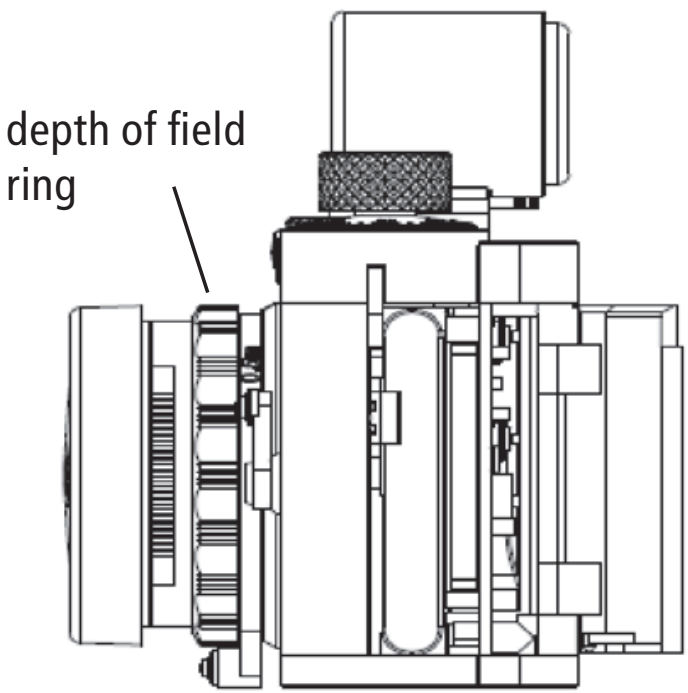

DIGITAL CLASSIC CAMERA 5.1

- 5.1 Megapixels
- 2.0" TFT/LCD-Display
- 128 MB internal memory
- SD cards up to 16 GB (optional)
- Compatible with
  MINOX Classic Camera flash
- Rechargeable Li-Ion battery

MINOX GmbH
Walter-Zapp-Str. 4
D-35578 Wetzlar, Germany
Tel.: +49 (0) 6441 / 917-0
Fax: +49 (0) 6441 / 917-612
e-mail: info@minox.com
www.minox.com

99468